

POWER SEAT SYSTEMS

TABLE OF CONTENTS

	page		page
GENERAL INFORMATION		DIAGNOSIS AND TESTING	
INTRODUCTION	1	POWER SEAT SYSTEM	2
POWER SEAT SYSTEM	1	POWER SEAT ADJUSTER AND MOTORS	2
DESCRIPTION AND OPERATION		POWER SEAT SWITCH	2
POWER SEAT SWITCH	1	REMOVAL AND INSTALLATION	
POWER SEAT ADJUSTER AND MOTORS	1	POWER SEAT SWITCH	3
		POWER SEAT ADJUSTER AND MOTORS	3

GENERAL INFORMATION

INTRODUCTION

A six-way driver side power seat is an available factory-installed option for this model. Refer to 8W-63 - Power Seat in Group 8W - Wiring Diagrams for complete circuit descriptions and diagrams.

POWER SEAT SYSTEM

The power seat system option allows the driver to electrically adjust his seating position for optimum control and comfort using the power seat switches located on the outboard seat cushion side shield. The power seat system allows the seating position to be adjusted forward, rearward, front up, front down, rear up, or rear down. The power seat system receives battery current through a fuse in the Power Distribution Center, regardless of the ignition switch position.

The power seat system includes the power seat adjuster and motors unit, the power seat switch, and the circuit breaker. Following are general descriptions of the major components in the power seat system. Refer to the owner's manual in the vehicle glove box for more information on the features, use and operation of the power seat system.

DESCRIPTION AND OPERATION

POWER SEAT SWITCH

The power seat can be adjusted in six different ways using the power seat switch. The switch is located on the lower outboard side of the seat cushion on the seat cushion side shield. Refer to the owner's manual for more information on the power seat switch functions and the seat adjusting procedures.

The individual switches in the power seat switch unit cannot be repaired. If one switch is damaged or

faulty, the entire power seat switch unit must be replaced.

POWER SEAT ADJUSTER AND MOTORS

There are three reversible motors that operate the power seat adjuster. The motors are connected to worm-drive gearboxes that move the seat adjuster through a combination of screw-type drive units.

The front and rear of a seat are operated by different motors. They can be raised or lowered independently of each other. When the center seat switch is pushed to the Up or Down position, both the front and rear motors operate in unison, moving the entire seat up or down. The forward-rearward motor is operated by pushing the center seat switch to the Forward or Rearward position.

When a switch is actuated, a battery feed and a ground path are applied through the switch contacts to the motor(s). The motor(s) and drives operate to move the seat in the selected direction until the switch is released, or until the travel limit of the power seat adjuster is reached. When the switch is moved in the opposite direction, the battery feed and ground path to the motor(s) are reversed through the switch contacts. This causes the motor to run in the opposite direction.

Each motor contains a self-resetting circuit breaker to protect it from overload. Consecutive or frequent resetting of the circuit breakers must not be allowed to continue, or the motors may be damaged. Make the necessary repairs.

The power seat adjuster and motors cannot be repaired, and are serviced only as a complete unit. If any component in this unit is faulty or damaged, the entire power seat adjuster and motors assembly must be replaced.

DIAGNOSIS AND TESTING

POWER SEAT SYSTEM

Before any testing of the power seat system is attempted, the battery should be fully-charged and all wire harness connections and pins cleaned and tightened to ensure proper continuity and grounds. For circuit descriptions and diagrams, refer to 8W-63 - Power Seat in Group 8W - Wiring Diagrams.

With the dome lamp on, apply the power seat switch in the direction of the failure. If the dome lamp dims, the seat may be jamming. Check under and behind the seat for binding or obstructions. If the dome lamp does not dim, proceed with testing of the individual components and circuits.

POWER SEAT ADJUSTER AND MOTORS

For circuit descriptions and diagrams, refer to 8W-63 - Power Seat in Group 8W - Wiring Diagrams.

Operate the power seat switch to move all three seat motors in each direction. The seat should move in each of the selected directions. If the power seat adjuster fails to operate in only one direction, move the adjuster a short distance in the opposite direction and test again to be certain that the adjuster is not at its travel limit. If the power seat adjuster still fails to operate in only one direction, see Power Seat Switch in the Diagnosis and Testing section of this group. If the power seat adjuster fails to operate in more than one direction, proceed as follows:

(1) Check for battery voltage at the fuse in the Power Distribution Center (PDC). If OK, go to Step 2. If not OK, repair the shorted circuit or component as required and replace the faulty fuse.

(2) Remove the power seat switch from the seat. Check for battery voltage at the fused B(+) circuit cavity of the power seat switch wire harness connector. If OK, go to Step 3. If not OK, repair the open circuit to the PDC as required.

(3) Check for continuity between the ground circuit cavity of the power seat switch wire harness connector and a good ground. There should be continuity. If OK, go to Step 4. If not OK, repair the open circuit to ground as required.

(4) Test the power seat switch as described in this group. If the switch tests OK, check the wire harness for the inoperative power seat motor(s) between the power seat switch and the motor for shorts or opens. If the circuits check OK, replace the faulty power seat adjuster and motors assembly. If the circuits are not OK, repair the wire harness as required.


POWER SEAT SWITCH

For circuit descriptions and diagrams, refer to 8W-63 - Power Seat in Group 8W - Wiring Diagrams.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the power seat switch from the power seat.

(3) Use an ohmmeter to test the continuity of the power seat switches in each position. See the Power Seat Switch Continuity chart (Fig. 1). If OK, see Power Seat Adjuster and Motors in the Diagnosis and Testing section of this group. If not OK, replace the faulty power seat switch unit.

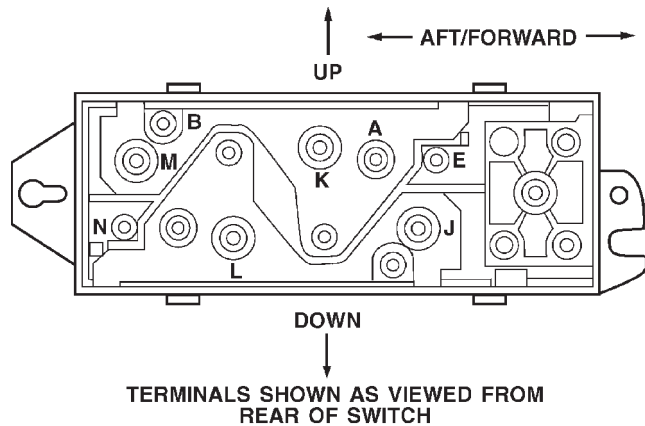

POWER SEAT SWITCH	
SWITCH POSITION	CONTINUITY BETWEEN
OFF	B & N, B & J, B & M, B & E, B & L, B & K
VERTICAL UP	A & E, A & M, B & N, B & J
VERTICAL DOWN	A & J, A & N, B & M, B & E
HORIZONTAL FORWARD	A & L, B & K
HORIZONTAL AFT	A & K, B & L
FRONT TILT UP	A & M, B & N
FRONT TILT DOWN	A & N, B & M
REAR TILT UP	A & E, B & J
REAR TILT DOWN	A & J, B & E

80b09a68

Fig. 1 Power Seat Switch Continuity

REMOVAL AND INSTALLATION

POWER SEAT SWITCH

(1) Disconnect and isolate the battery negative cable.

(2) Remove the screw that secures the recliner lever to the recliner mechanism release shaft on the outboard side of the driver side front seat.

(3) Pull the recliner lever off of the recliner mechanism release shaft.

(4) Remove the three screws that secure the driver side seat cushion side shield to the outboard seat cushion frame.

(5) Pull the driver side seat cushion side shield away from the seat cushion frame far enough to access the power seat switch module wire harness connector.

(6) Unplug the wire harness connector from the power seat switch module.

(7) Remove the seat cushion side shield and power seat switch module from the seat as a unit.

(8) Remove the two screws that secure the power seat switch to the inside of the seat cushion side shield (Fig. 2).

(9) Remove the power seat switch from the seat cushion side shield.

(10) Reverse the removal procedures to install. Tighten the switch mounting screws to 2.2 N·m (20 in. lbs.).


POWER SEAT ADJUSTER AND MOTORS

(1) Disconnect and isolate the battery negative cable.

(2) Remove the driver side seat, adjuster and motors assembly from the vehicle as a unit. Refer to Group 23 - Body for the procedures.

(3) Unplug the power seat wire harness connectors at each of the three power seat motors.

(4) Release the power seat wire harness retainers from the seat adjuster and motors assembly.

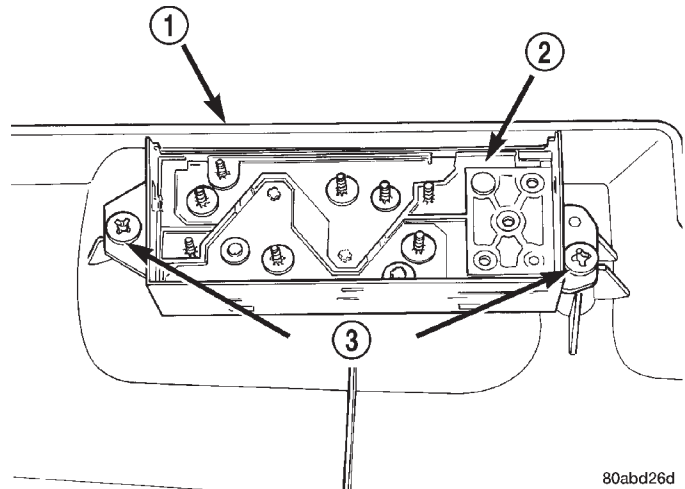

80abd26d

Fig. 2 Power Seat Switch Remove/Install - Typical

- 1 - SEAT SIDE SHIELD
- 2 - POWER SEAT SWITCH
- 3 - SCREWS

(5) Remove the four screws that secure the power seat adjuster and motors assembly to the seat cushion frame.

(6) If the vehicle is equipped with a split bench seat, remove the fasteners that secure the center seat cushion section to the brackets on the power seat adjuster.

(7) Remove the power seat adjuster and motors assembly from the seat cushion frame.

CAUTION: Before installing the seat into the vehicle, be certain to adjust the seat fully rearward on its tracks. Then install and tighten the front track mounting screws before installing the rear screws or the tracks may be damaged.

(8) Reverse the removal procedures to install.

